

ASSEMBLY INSTRUCTIONS

OZtrail advises to assemble your Shelter before use to ensure all parts are present and to become familiar with the assembly of your shelter. Choose a flat level area with no objects that could damage the floor. Layout out the shelter facing the desired direction. Peg out the four corners of the shelter floor. Anchor the shelter to the ground by inserting the pegs through the ring loops at each corner of the floor at an angle of 45 degrees. Firm but not tight. As you work from one peg point to the other around the shelter base pull the floor firmly, but not tight. If on sand fill the sand bags to anchor the shelter in position.


Helpful Hint Be careful not to twist or force the frame assembly when unfolding the shelter. Until you are locking the central roof hub into its final position, it is not necessary at any stage of shelter assembly to apply more than a small force on the frame. If a small force is not sufficient to carry out each described step, then realign the frame and try again.

Step 1: Lay shelter flat with central hub upright. Make sure poles are fully extended and spread out. Step 2: Grip lower hub of shelter and lift to eye level. With the other hand, begin to pull cord. Step 3: Continue to pull cord back like drawing a bow. As the hub gets closer to connecting, the resistance will increase and the shelter will bow out.


Ensure all peg down points are utilised and remain firm. Ensure the shelter remains securely anchored at all times.

In severe conditions the shelter should be dismantled.


To pack away, simply pull down on the lower portion of the central frame hub to release tension and then reverse the above.

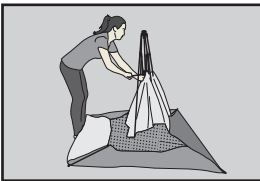

STEP 1.

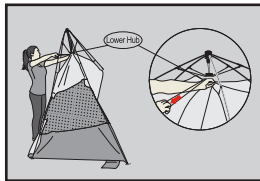

STEP 2.

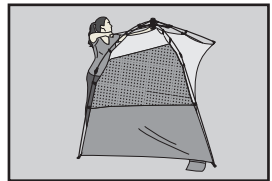

STEP 3.

WARRANTY

OZtrail warrants this product against defects for a period of two years from the date of purchase. OZtrail will repair or replace the product, at its discretion, should a warrantable defect arise within the warranty period. If the exact model is unavailable a model of equivalent nature will be substituted at our discretion. This warranty excludes faults and failures caused by improper use and abuse; fair wear and tear; or failure to follow instructions regarding care and maintenance. Products used for a commercial nature are not covered by this warranty against defects. A warranty may be claimed by returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase. You may also contact OZtrail Leisure Products, by phone: 07 3193 1110, or in writing: PO Box 1110, Eagle Farm QLD 4009, by email: warranty@oztrail.com.au. The benefits under OZtrail's warranty against defects are in addition to other rights and remedies under law in relation to goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For more detailed information and an explanation of these terms see www.oztrail.com.au/warranty